


TIP OF THE MONTH OCTOBER 2006

PLACEMENT OF DRAPERY PIN HOOKS (From top of drapery to top of hook)

Traverse rod	1 3/4"
Ceiling Mount Traverse Rod	1 1/2"
1 1/2" Decorative Traverse	3/8"
1 3/8" Decorative Traverse Rod	1/2"
Wood Pole with Rings	1/4"
Cirmosa Rod	7/8"

Creasing the crinoline (toward the front) at the center of each space between the pleats will help the drapery to traverse on the rod.

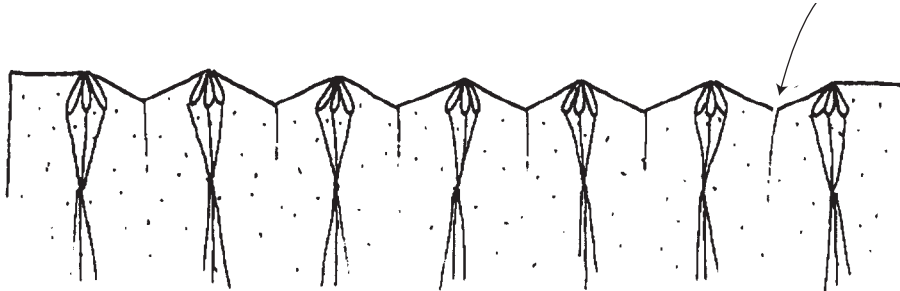

Taken (in part) from
M'Fay Workroom Manual.